


INSTALLATION OVER HYDRONIC UNDERFLOOR HEATING

The image is an example and should be used as a guide only and professional advice and site conditions must be taken into consideration.

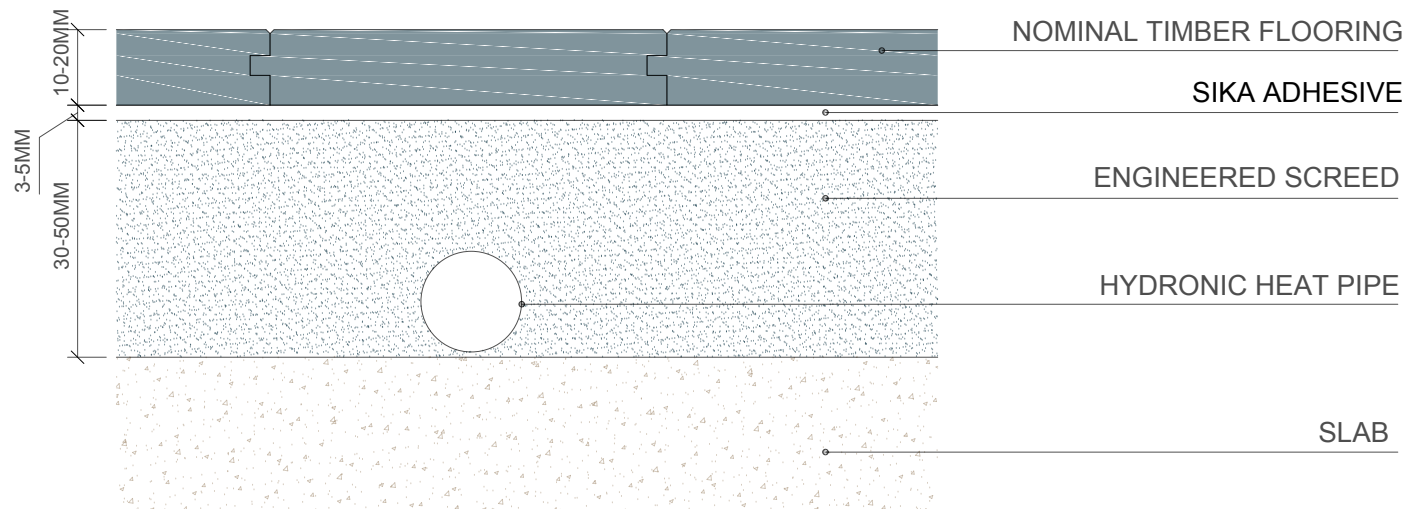

METHOD

Cover pipes with Engineered screed
Then full trowel adhere the wood flooring with Sika T58

Refer to Woodos install guide for full descriptions

Dimensions are approximate and project requirement
need to be taken into consideration

Woodos. 